

Installation of EX-01, EX-03, EX-04 Pocket Clip Kit

Note: Do not remove safety screw without tool. See instructions below.

- 1) To change the safety screw: Insert wooden dowel provided between the scales so that it presses firmly against the safety plate, as shown in Figure 1. Keep pressure on this while removing the safety screw and replacing it with the new safety screw. Do not move the safety while the screw is out.
- 2) Test the action of the safety. When blade is in open position flip the safety on. Depress the lock button and make sure that the blade does not close. The lock button will depress slightly when in the locked position but will not disengage the safety when installed properly.

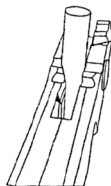


FIGURE 1

- 3) With knife in the position shown in Figure 2, use T8 Torx wrench provided to remove the screws that secure the pocket clip.
- 4) Remove the pivot pin screw that is located under the belt clip. Note: In some older knives this screw will require a 3/32" Allen wrench.
- 5) Install the new pivot pins screw. Check action of blade. Tighten or loosen screw until blade operates smoothly and without wobble.

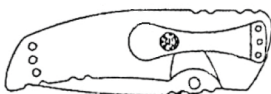


FIGURE 2

- 6) Install the new pocket clip with the 3 screws provided.
- 7) Turn knife over as shown in Figure 3.
- 8) Remove the 3 frame screws with T8 torx wrench. Note: On some older knives these screws will require a .050" Allen wrench to remove.
- 9) Install the new frame screws as indicated in the drawing.



FIGURE 3

Package Contents:

- | | |
|----------------------|---------------------|
| 1 Spoon Belt Clip | 2 Frame Screw Short |
| 1 Torx Wrench | 1 Frame Screw Long |
| 1 Pivot Screw | 1 Wooden Dowel |
| 4 Safety/Clip Screws | |

For assistance with installation of this kit
or any related questions,
please call **1-800-GETGRIP**
or email us at **support@hogueinc.com**



1-800-GETGRIP
www.hogueinc.com